

105x75mm

BLOW

Kolumna głośnikowa aktywna Bluetooth z mikrofonem


Bluetooth

TWS / STEREO



CITYLIGHT

Opis panelu sterującego

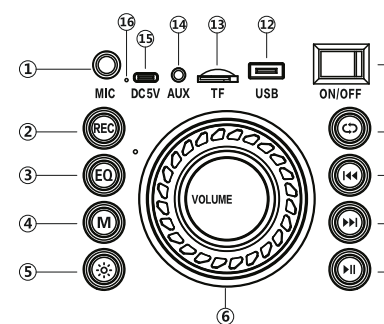

Sterowanie odtwarzaniem muzyki

Naciśnij **MI**, aby wstrzymać lub wznowić odtwarzanie. Naciśnij **MI**, aby odtworzyć następny utwór. Naciśnij **MI**, aby odtworzyć poprzedni utwór. Obróć pokrętkę głośności w prawo lub w lewo, aby zwiększyć lub zmniejszyć główną głośność.

Złącze AUX

Podłącz głośnik do zewnętrznego urządzenia audio za pomocą 3,5 mm przewodu audio. Po zatrzymaniu odtwarzania z innego źródła rozpocznij odtwarzanie dźwięku na urządzeniu zewnętrznym.

Specyfikacja

Bluetooth v5.3
Pilot zdalnego sterowania
Radio FM
Karaoke
Funkcja TWS (wymaga drugiego głośnika)
Głośniki 4"x2
Maksymalna moc wyjściowa: 160W
Zakres częstotliwości: 80Hz - 12KHz

Impedancja 3 Ohm
Czułość: > = 80dB
Czułość mikrofonu przewodowego -60 dB ±3 dB
Porty: AUX, USB, SD, DC, mikrofon
Wbudowana bateria: 4500mAh 3,7V
Ładowanie: prąd stały 5V/2A
Wymiar: 213x195x425mm
Waga: 2,9 kg

Połączenie Bluetooth

Głośnika można używać ze smartfonem lub tabletem z technologią Bluetooth.
1. Aby włączyć tryb parowania Bluetooth, naciśnij przycisk na głośniku.
2. Aby nawiązać połączenie, wybierz „BLOW CityLIGHT” na urządzeniu Bluetooth.
3. Po nawiązaniu połączenia można rozpocząć strumieniowanie dźwięku z urządzenia Bluetooth na głośnik.

Uwagi:

Na głośniku można zapisać maksymalnie osiem sparowanych urządzeń. Dziewięć parowane urządzenie zastąpi informację o pierwszym sparowanym urządzeniu.
Jeśli podczas łączenia z urządzeniem Bluetooth pojawi się monit o podanie kodu PIN, wpisz „0000”.
Działanie połączenia Bluetooth zależy od odległości między tym produktem i urządzeniem Bluetooth, a także warunków zewnętrznych.

Aby odłączyć urządzenie Bluetooth:

wyłącz ten głośnik; lub
wyłącz funkcję Bluetooth na urządzeniu.

Jak ponownie nawiązać połączenie z urządzeniem Bluetooth:

Podczas ponownej próby połączenia głośnik będzie automatycznie wyszukiwać ostatnio używanego urządzenia. W przeciwnym razie należy stuknąć „BLOW CityLIGHT” na urządzeniu Bluetooth, aby nawiązać połączenie.

Połączenie USB


Pozwala podłączyć urządzenie pamięci masowej USB, które zawiera pliki audio w odpowiednim formacie, do portu USB w głośniku.
- Głośnik automatycznie przełączy się na źródło USB.
- Odtwarzanie dźwięku rozpocznie się automatycznie.

Sposób użycia TWS (True Wireless Stereo):

1. Włącz 2 głośniki, oba przełączają się w „tryb Bluetooth”.
2. Długie naciśnięcie przycisku trybu „M” na jednym z głośników spowoduje automatyczne połączenie się obu głośników.
3. W trybie TWS możesz regulować główną głośność / odtwarzanie / pauzę / następny utwór / poprzedni utwór, aby jednocześnie sterować 2 głośnikami.
4. Jeśli chcesz odłączyć TWS, ponownie naciśnij i przytrzymaj „M” na panelu głośnika.

WAŻNE INFORMACJE DOTYCZĄCE BEZPIECZEŃSTWA

1. Prosimy zapoznać się z niniejszym dokumentem.
2. Nie wolno blokować otworów wentylacyjnych.
3. Nie instalować opisywanego urządzenia w pobliżu źródeł ciepła, takiego jak grzejniki, kratki wentylacyjne, kucharki czy inne urządzenia (w tym wzmacniacze) wytwarzające ciepło.
4. Przewód zasilający należy chronić przed zdeptaniem lub zgnieciem, szczególnie w pobliżu wtyczki, gniazda przedłużacza lub miejsca, gdzie przewód wychodzi z urządzenia.
5. Należy używać tylko akcesoriów/dodatkowych elementów wyszczególnionych przez producenta.
6. Należy odłączyć urządzenie od gniazda sieciowego na czas burzy z piorunami lub przed dłuższym okresem nieużywania.
7. Aby odłączyć urządzenie od sieci elektrycznej, należy odłączyć wtyczkę przewodu zasilającego od gniazda sieciowego.

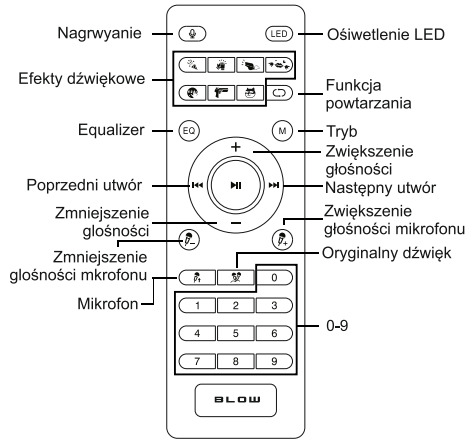

1. **[MIC]** : Podłącz mikrofon.
2. **[REC]** : Włóż kartę pamięci SD, podłącz mikrofon, naciśnij krótko, aby nagrać, ekran wyświetli REC, a następnie naciśnij krótko, aby odtworzyć nagranie, naciśnij długo, aby usunąć plik nagrania podczas odtwarzania, a wyświetli się dEL.
3. **[EQ]** : Krótkie naciśnięcie dwóch rodzajów efektów dźwiękowych EQ, EQ0 (dźwięk na zewnątrz, gdy zasilanie włączone); EQ1 (nagłośnienie wewnętrzne).
4. **[M]** : Zmiana trybów odtwarzania: tryb Bluetooth, tryb karty pamięci SD, tryb dysku USB, tryb FM, naciśnij długo, aby automatycznie wyszukać kanały w trybie FM.
5. **[*]** : Krótkie naciśnięcie przełącza efekt oświetlenia.
6. **[VOLUME]** : Obróć w lewo, aby zmniejszyć głośność, obróć w prawo, aby zwiększyć głośność.
7. **[ON/OFF]** : Włączanie/wyłączanie zasilania
8. **[C]** : W trybie muzycznym krótkie naciśnięcie powoduje pojedynczą pętlę **[ONE]** zapętli całość **[ALL]** .
9. **[<=>]** : Krótkie naciśnięcie, aby przejść do poprzedniego utworu/wybrać poprzednią stację radiową, długie naciśnięcie, aby przewinąć do tyłu.
10. **[>=>]** : Krótkie naciśnięcie, aby przejść do następnego utworu/wybrać następną stację radiową, długie naciśnięcie, aby przewinąć do przodu.
11. **[MI]** : Krótkie naciśnięcie, aby odtworzyć/wstrzymać, długie naciśnięcie, aby automatycznie wyszukać kanały w trybie FM.
12. **[USB]** : Włóż dysk USB, aby odtwarzać muzykę MP3. (Maksymalna użyteczna pojemność dla USB to 64 GB)
13. **[TF]** : Włóż kartę SD, aby odtwarzać muzykę MP3. (Maksymalna użyteczna pojemność dla karty SD Ma 64 GB)
14. **[AUX]** : wejście audio AUX.
15. **[DC 5V]** : włóż kabel ładujący USB podłącz do ładowarki i podłącz do gniazda sieciowego.
16. **[Kontrolka ładowania]** : Czerwone światło świeci się podczas ładowania, kiedy głośnik jest w pełni naładowany czerwone światło gaśnie, a zielone światło jest włączone.

Producent: PROLECH Sp. z o.o., Stary Puznów 58B, 08-400 Garwolin, Polska
Nazwa produktu: Głośnik Bluetooth
Marka: BLOW
Model: CityLIGHT
Kod: 30-391#


Niniejszym Producent Prolech Sp. z o.o. oświadcza, że opisywane urządzenie spełnia wymagania dyrektywy 2014/30/EU, 2011/65/EU, 2015/863/EU, 2017, 2017/2102/EU. Deklaracja zgodności jest dostępna na stronie internetowej: www.prolech.com.pl

Hereby, the Producer Prolech Sp. z o.o. declares that this device complies with the requirements of the directives 2014/30/EU, 2011/65/EU, 2015/863/EU, 2017, 2017/2102/EU.
The declaration of conformity is available from the website www.prolech.com.pl

Stary Puznów, 13.03.2023



Wyprodukowano w Ch.R.L. dla firmy PROLECH Sp. z o.o., Stary Puznów 58B, 08-400 Garwolin, Polska
www.blow.pl | www.prolech.com.pl

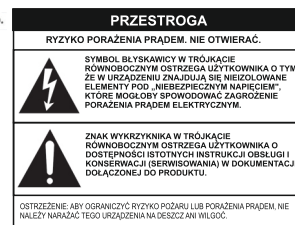

105x75mm

BLOW

Active loudspeaker Bluetooth with microphone


Bluetooth

TWS / STEREO



CITYLIGHT

Description of the control panel

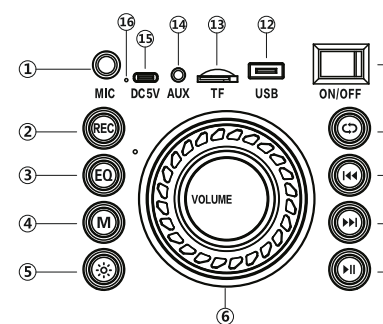

Music playback controls

Press **MI** to pause or resume playback. Press **MI** to play the next song. Press **MI** to play the previous track. Turn the volume knob clockwise or counterclockwise to increase or decrease the master volume.

AUX connector

Connect the speaker to an external audio device with a 3.5mm audio cable. When the other source is stopped, start playing audio on the external device.

Specification

Bluetooth v5.3
Remote control
FM radio
Karaoke
TWS function (requires second speaker)
Speakers 4"x2
Maximum output power: 160W
Frequency range: 80Hz - 12KHz

Impedance 3 Ohm
Sensitivity: > = 80dB
Wired microphone sensitivity -60 dB ±3 dB
Ports: AUX, USB, SD, DC, microphone
Built-in battery: 4500mAh 3.7V
Charging: DC 5V/2A
Dimension: 213x195x425mm
Weight: 2.9 kg

Bluetooth connection

The speaker can be used with a smartphone or tablet with Bluetooth technology.
1. To enter Bluetooth pairing mode, press the button on the speaker.
2. Select "BLOW CityLIGHT" on your Bluetooth device to connect.
3. Once connected, you can start streaming audio from your Bluetooth device to the speaker.

Comments:

Up to eight paired devices can be stored on the speaker. The ninth paired device will replace the information of the first paired device. If you are prompted for a PIN when connecting to a Bluetooth device, enter "0000". The performance of the Bluetooth connection depends on the distance between this product and the Bluetooth device, as well as external conditions.

To disconnect a Bluetooth device:

turn off this speaker
turn off Bluetooth on your device

How to reconnect to a Bluetooth device:

When reconnecting, the speaker will automatically search for the last used device. Otherwise, tap "BLOW CityLIGHT" on your Bluetooth device to connect.

USB connection


Allows you to connect a USB storage device that contains audio files in the correct format to the USB port on the speaker.
- The speaker will automatically switch to the USB source.
- Audio playback will start automatically.

How to use TWS (True Wireless Stereo):

1. Turn on 2 speakers, both switch to "Bluetooth mode".
2. Long press the "M" mode button on one of the speakers, both speakers will connect automatically.
3. Under TWS mode, you can adjust master volume/pause/next song/previous song to control 2 speakers simultaneously.
4. If you want to disconnect the TWS, press and hold "M." on the speaker panel again.

IMPORTANT SAFETY INFORMATION

1. Please read this document.
2. Do not block the ventilation openings.
3. Do not install the device near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, or the point where the cord exits from the apparatus.
5. Use only accessories/add-ons specified by the manufacturer.
6. Unplug the device from the power outlet during lightning storms or when not in use for an extended period of time.
7. To disconnect the device from the mains, disconnect the mains plug from the mains socket.

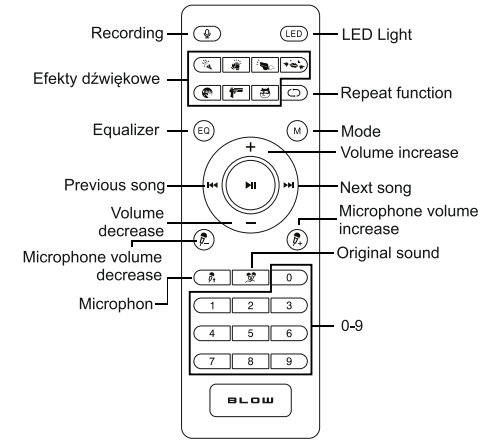

1. **[MIC]** : Connect the microphone.
2. **[REC]** : Insert the SD memory card, connect the microphone, short press to record, the screen will display REC, then short press to play the recording, long press to delete the recording file during playback, and it will display dEL.
3. **[EQ]** : Short press two kinds of EQ sound effects, EQ0 (sound out when power on); EQ1 (internal sound system).
4. **[M]** : Change play modes: Bluetooth mode, SD memory card mode, USB disk mode, FM mode, long press to automatically search channels in FM mode.
5. **[*]** : Short press to switch lighting effect.
6. **[VOLUME]** : Rotate left to decrease the volume, rotate to the right to increase the volume.
7. **[ON/OFF]** : Power on/off
8. **[C]** : In music mode, short press to single loop **[ONE]** loop all **[ALL]** .
9. **[<=>]** : Short press to go to previous song/select previous radio station, long press to rewind.
10. **[>=>]** : Short press to skip to next song/select next radio station, long press to fast forward.
11. **[MI]** : Short press to play/pause, long press to search channels automatically in FM mode.
12. **[USB]** : Insert USB disk to play MP3 music. (Maximum usable capacity for USB is 64GB)
13. **[TF]** : Insert SD card to play MP3 music. (Maximum usable capacity for SD card is 64GB)
14. **[AUX]** : AUX audio input.
15. **[DC 5V]** : insert the USB charging cable connect to the charger and plug into the power socket.
16. **[Charging Indicator Light]** : The red light is on when charging, when the speaker is fully charged, the red light is off and the green light is on.

Producer: PROLECH Sp. z o.o., Stary Puznów 58B, 08-400 Garwolin, Polska
Product description: Głośnik Bluetooth
Marka: BLOW
Model: CityLIGHT
Item: 30-391#

Hereby, the Producer Prolech Sp. z o.o. declares that this device complies with the requirements of the directives 2014/30/EU, 2011/65/EU, 2015/863/EU, 2017, 2017/2102/EU.
The declaration of conformity is available from the website www.prolech.com.pl

Stary Puznów, 13.03.2023



Wyprodukowano w Ch.R.L. dla firmy PROLECH Sp. z o.o., Stary Puznów 58B, 08-400 Garwolin, Polska
www.blow.pl | www.prolech.com.pl

