



INSTRUKCJA MONTAŻU MK DP 881 WS

• akcesoria:

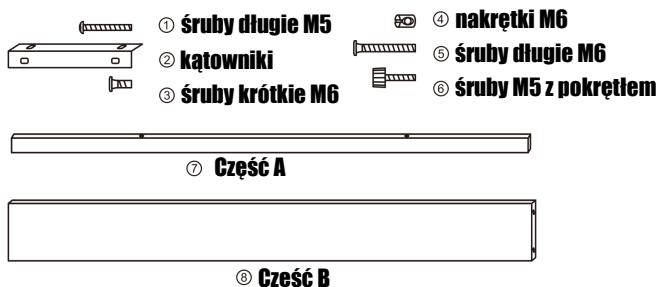


Dokonać montażu zgodnie z poniższą instrukcją. Potrzebne narzędzia (brak w zestawie): śrubokręt krzyżakowy, śrubokręt płaski.


1. Zainstalować część A (7): przyłożyć do dołu pianina i przykręcić za pomocą 2 śrub długich M5 (1).

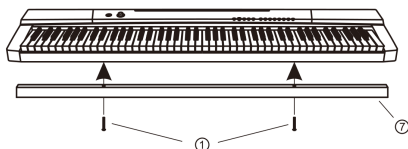


2. Zainstalować kątowniki (2): przyłożyć kątowniki do części C i D (9 i 10) zgodnie z poniższym rysunkiem i przykręcić za pomocą 4 śrub krótkich M6 (3).

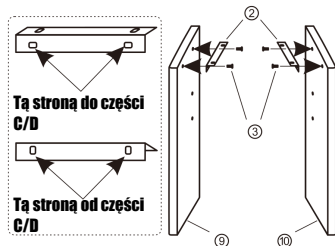

3. Zainstalować część B (8): umieścić część B między częściami C i D (9 i 10), przyłożyć 4 nakrętki M6 (4) jak na rysunku, użyć płaskiego śrubokręta do dopasowania nakrętek do otworów, przykręcić część B (8) za pomocą 4 śrub długich M6 (5).

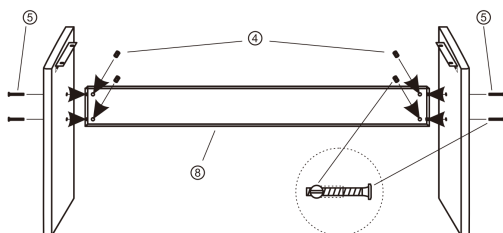


4. Zainstalować pianino: umieścić pianino na kątownikach (2) i przykręcić za pomocą 4 śrub M5 z pokrętłami (6).

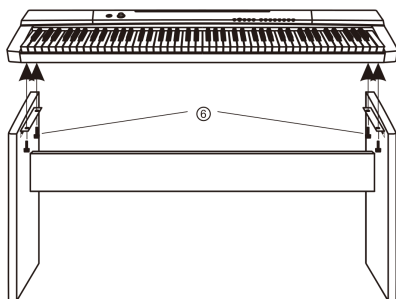


Attention:PLEASE ASSEMBLE BY ADULT

● accessories:

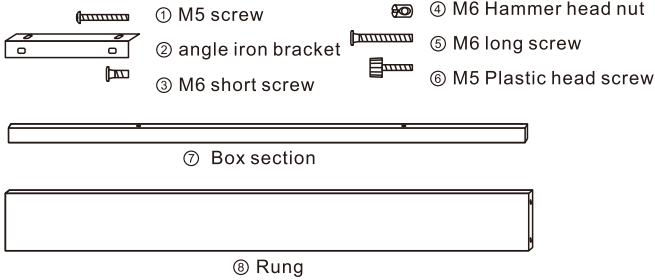


Please Install the wooden frames according to the diagram below (please prepare installation tools: large size phillips screwdriver and slot type screwdriver).


1. Install box section : Place the box section⑦ into the groove on the bottom of the piano and tighten it with M5 screws① .

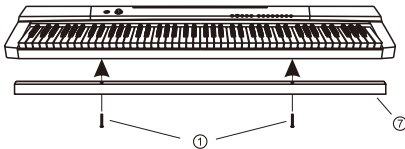

2. Installation of angle iron bracket② : Install the iron brackets separately on the left and right baseboard(⑨&⑩) (please notice that the angle iron bracket's direction), and then tighten them with the M6 short screws③ .

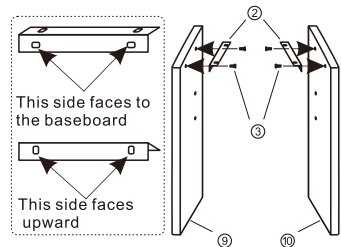

3. Install the Rung⑧: mack the perforated side of the Rung facing backwards, and insert the M6 hammer nut④ as shown in the diagram. Use a slot type screwdriver to adjust the hammer head nut to the holes on both baseboard. Then lock the rung⑧ with M6 long screw⑤ from behind of baseboard.

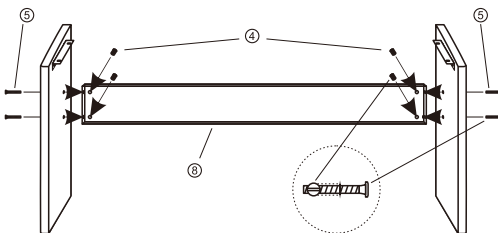

4. Piano instillation : place the piano on the top of the wooden frame and lock the piano with M5 plastic head screws⑥.

